 


how to measure

These measuring instructions apply for all types of window coverings.

 
- For accurate measurements always use a metal tape measure
- Take measurements in millimetres
- Choose whether you want your blind to fit inside the recess of your window or hang outside the recess overlapping the window
- Always specify the width first, followed by the drop

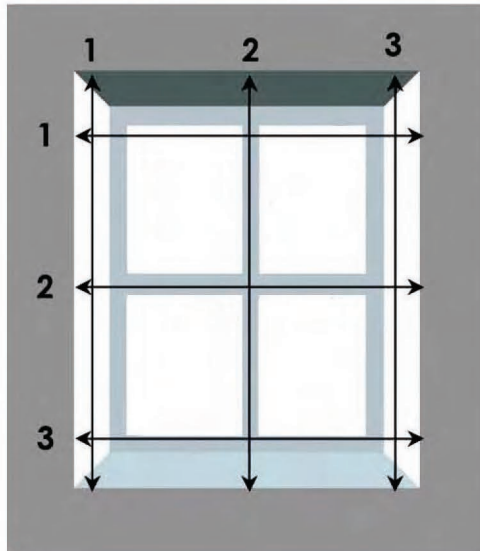

RECESS

For blinds to hang inside the window recess.

- Measure the width of the window recess in three places as shown
- Measure the drop by taking the measurement from the top of the recess to the window sill, in three places as shown
- Use the smallest measurement
- We will make all adjustments to ensure your blind fits perfectly

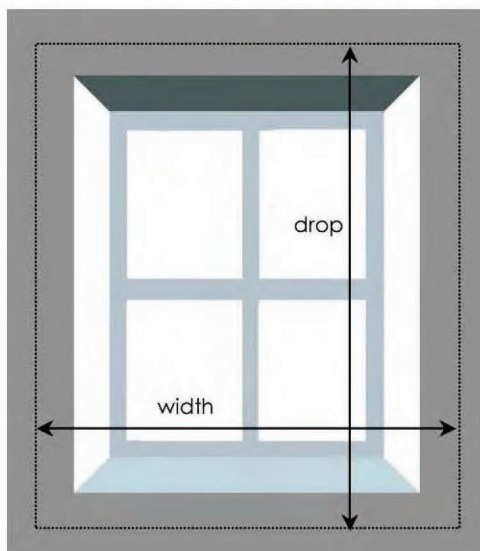

BLIND SIZE

For blinds to hang outside the window.

- Measure the exact area you would like the blind to cover as shown
- To minimise light leakage we recommend the blind overlaps by at least 50mm each side