

# fitting instructions for aluminium venetian blinds


## Step 1

### Outside Recess

If the blind is to be fitted outside the window, ensure that measurement **C** is the same. **C** is simply equal to **A** minus **B**, divided by two. Follow instructions for FACE FIXING.

### inside Recess


If TOP FIXING, fix to the lintel if the window frame is uPVC, or if there are no obstructions. If FACE FIXING, fit bracket to window frame.

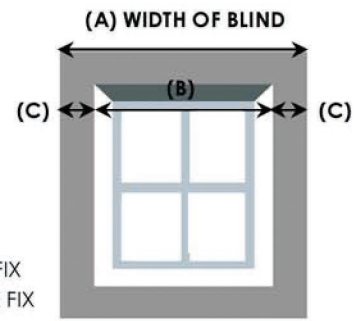

## Step 2

Place the blind into position and tilt forward to show the controls and ladder positions. Brackets should be fitted at least 5cm from either side of a ladder or wand control.


B: Bracket locations  
W: Wand control  
L: Ladder control  
C: Cord control

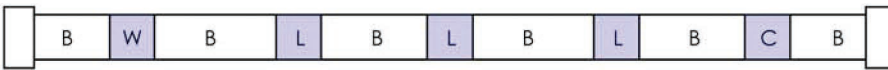

## Step 3

### Top Fixing - Swivel Bracket


Measure and mark the distance (D), allowing for obstructions like handles that protrude into the recess area. Mark this measurement on the lintel and align the back of the bracket with this line. Fix the bracket into position using the fixing holes.

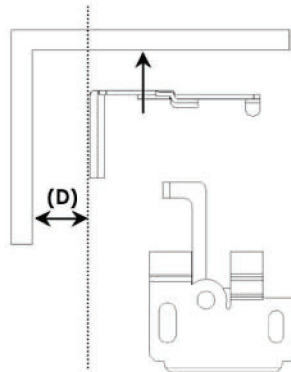

### Face Fixing - Swivel Bracket


Position the bracket with the swivel arm open and fix bracket using holes shown.

Fixing holes

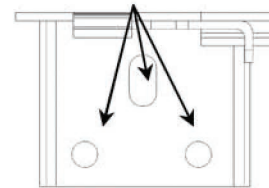

### Top Fixing - End Fix Bracket

Measure and mark the distance (D), allowing for obstructions like handles that protrude into the recess area. Mark this measurement on the lintel and align the back of the bracket with this line. Fix the bracket into position using the fixing holes.

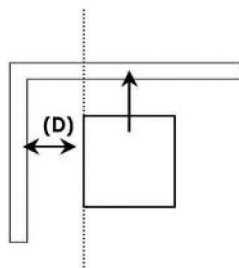

### Face Fixing - End Fix Bracket

Position the bracket and fix using holes shown.


Fixing holes



## Step 4

### Swivel Bracket

Open the swivel arm fully. Clip the front of the blind headrail over the bracket at point (E).

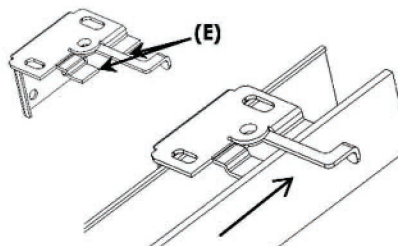

### End Fix Bracket

Open each end fix bracket and position the blind into the brackets.

